

## START UP INSTRUCTIONS

- 1. Plug in machine
- 2. Locate power button on the rear of the machine, set it to the "ON" position
- 3. Locate "Red Emergency Off" plunger on top of machine, pull it up
- 4. Machine will now be "ON"
- 5. Locate the LED Menu Screen on front of machine



Main Menu



**Pillow Settings** 

- 1. Press the black "Set" button to select a menu option. Use the "Blue + Arrow/ - Arrow" buttons to change the number in each option.
- 2. Set the "Temp" option to 95
- 3. Set the "Motor" option to 29
- 4. Set the "Wind" option to 18 for IPP1223 Pillows / 65 for LIB1215 Bubbles / 40 for HIP1215 Hybrid
- 5. Set the "Long" option to the desired length of dunnage you wish to create. The machine is set for meters. 1 meter = 3.28 feet
- 6. Press the black "Set" button again to lock in your choices



## **Advanced Air**

## INSTRUCTIONS TO SET LENGTH OF DUNNAGE

- 1. Press "Blue Down Arrow" button 8 times and hold it down until machine begins beeping and Secondary Menu appears on LED screen.
- 2. Press the black "SET" button to advance through the menu options until you get to the 3rd menu screen.
- 3. Change the LOGOSpeed option to 5 with the "Blue + Arrow" button.
- 4. Press the black "SET" button once to choose the CountL menu option.
- 5. Use the "Blue + Arrow" button to choose "open".
- Press the black "SET" button once to choose the CountM menu option.
  Use the "Blue + Arrow" button to choose "open".
- 7. Press "Green Arrow" button to lock choices. Press "Green Arrow" again to begin creating dunnage.



**Control Panel** 



Secondary Menu Screen 1



Secondary Menu Screen 2



Secondary Menu Screen 3